PTB210 Series Digital Barometers with Analog Output

USER'S GUIDE

U399EN-1.1 December 1999





PUBLISHED BY

| VAISALA Oyj | Phone (int.): | (+358 9) 894 91 |
|--------------------|---------------|-------------------|
| P.O. Box 26 | Telefax: | (+358 9) 894 9227 |
| FIN-00421 Helsinki | Telex: | 122842 vsala fi |
| FINLAND | | |

Visit our Internet pages at http://www.vaisala.com/

© Vaisala 1999

No part of this manual may be reproduced in any form or by any means, electronic or mechanical (including photocopying), nor may its contents be communicated to a third party without prior written permission of the copyright holder.

The contents of instruction manuals are subject to change without prior notice.

Table of contents

| CHAPTER 1 | |
|-------------------------------|--|
| GENERAL INFORMATION | |
| Safety3 | |
| Warranty4 | |
| | |
| CHAPTER 2 | |
| PRODUCT DESCRIPTION5 | |
| | |
| | |
| INSTALLATION | |
| Mounting7 | |
| Static pressure head8 | |
| Connections9 | |
| | |
| CHAPTER 4 | |
| CALIBRATION AND ADJUSTMENT10 | |
| Wizard software10 | |
| Operation11 | |
| | |
| CHAPTER 5 | |
| TECHNICAL DATA15 | |
| Technical specifications15 | |
| Operating range15 | |
| Accuracy15 | |
| General | |
| Electromagnetic compatibility | |
| Dimensions17 | |

This page intentionally left blank.

CHAPTER 1 GENERAL INFORMATION

Safety

Throughout the manual, important safety considerations are highlighted as follows:

| WARNING | Warning denotes a serious hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury to or death of personnel. |
|---------|--|
| CAUTION | Caution denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. |
| NOTE | Note highlights important information. It calls attention to an essential procedure, practice, condition or the like. |

Warranty

Vaisala hereby represents and warrants all Products manufactured by Vaisala and sold hereunder to be free from defects in workmanship or material during a period of twelve (12) months from the date of delivery save for products for which a special warranty is given. If any Product proves however to be defective in workmanship or material within the period herein provided Vaisala undertakes to the exclusion of any other remedy to repair or at its own option replace the defective Product or part thereof free of charge and otherwise on the same conditions as for the original Product or part without extension to original warranty time. Defective parts replaced in accordance with this clause shall be placed at the disposal of Vaisala.

Vaisala also warrants the quality of all repair and service works performed by its employees to products sold by it. In case the repair or service works should appear inadequate or faulty and should this cause malfunction or nonfunction of the product to which the service was performed Vaisala shall at its free option either repair or have repaired or replace the product in question. The working hours used by employees of Vaisala for such repair or replacement shall be free of charge to the client. This service warranty shall be valid for a period of six (6) months from the date the service measures were completed.

This warranty is however subject to following conditions:

a) A substantiated written claim as to any alleged defects shall have been received by Vaisala within thirty (30) days after the defect or fault became known or occurred, and

b) the allegedly defective Product or part shall, should Vaisala so require, be sent to the works of Vaisala or to such other place as Vaisala may indicate in writing, freight and insurance prepaid and properly packed and labelled, unless Vaisala agrees to inspect and repair the Product or replace it on site.

This warranty does not however apply when the defect has been caused through

a) normal wear and tear or accident;

b) misuse or other unsuitable or unauthorized use of the Product or negligence or error in storing, maintaining or in handling the Product or any equipment thereof;

c) wrong installation or assembly or failure to service the Product or otherwise follow Vaisala's service instructions including any repairs or installation or assembly or service made by unauthorized personnel not approved by Vaisala or replacements with parts not manufactured or supplied by Vaisala;

d) modifications or changes of the Product as well as any adding to it without Vaisala's prior authorization;

e) other factors depending on the Customer or a third party.

Notwithstanding the aforesaid Vaisala's liability under this clause shall not apply to any defects arising out of materials, designs or instructions provided by the Customer.

This warranty is expressly in lieu of and excludes all other conditions, warranties and liabilities, express or implied, whether under law, statute or otherwise, including without limitation ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE and all other obligations and liabilities of Vaisala or its representatives with respect to any defect or deficiency applicable to or resulting directly or indirectly from the Products supplied hereunder, which obligations and liabilities are hereby expressly cancelled and waived. Vaisala's liability shall under no circumstances exceed the invoice price of any Product for which a warranty claim is made, nor shall Vaisala in any circumstances be liable for lost profits or other consequential loss whether direct or indirect or for special damages.

CHAPTER 2 PRODUCT DESCRIPTION

The PTB210 series digital barometers are designed for various pressure ranges. The barometers with an analog output are available with different scalings between 500...1300 hPa for 0...5V or 0...2.5V. The PTB210 series barometers are also available with a digital output.

The PTB210 series barometers offer an excellent solution for outdoor installations. They operate in a wide temperature range. The housing of the barometer electronics provides an IP65 standardized protection against sprayed water. The rugged corrosion-resistant housing in combination with the small size facilitates easy installation and a long lifetime for the barometer.

All the barometers are digitally adjusted and calibrated by using electronic working standards.

This manual gives the instructions for the use of PTB210 barometers with the analog output.

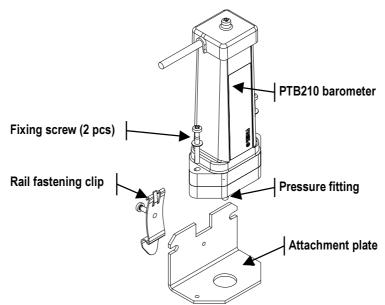


Figure 1

PTB210 and the standard accessories

The PTB210 barometers incorporate the BAROCAP[®] silicon capacitive absolute pressure sensor developed by Vaisala. The sensor features excellent hysteresis and repeatability characteristics and has an outstanding temperature and long-term stability.

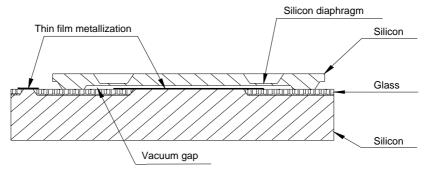


Figure 2 The BAROCAP[®] pressure sensor

The BAROCAP[®] pressure sensor consists of two layers of single crystal silicon having a layer of glass between them. The thinner silicon layer creates an integrated vacuum reference chamber, and forms a pressure-sensitive silicon diaphragm. The thicker silicon layer is the rigid base plate of the sensor, and it is clad with a glass dielectric. Thin film metallization has been deposited to form a capacitor electrode inside the vacuum reference chamber. The other electrode is the pressure-sensitive silicon diaphragm.

The coefficients of thermal expansion of silicon and glass materials used in the BAROCAP[®] pressure sensor are carefully matched together to minimize the temperature dependence, and to maximize the long-term stability. The BAROCAP[®] pressure sensor is designed to achieve zero temperature dependence at 1000 hPa, and its long-term stability has been maximized by thermal ageing at an elevated temperature.

CHAPTER 3

Mounting

Due to the compact design of the PTB210, all you need to do is to mount the instrument, and to connect the wires. Use one of the following three mounting options.

- Remove the pressure fitting, and place the barometer on a desired structure. Then, fix it with the slot headed screws, the O-ring sealing the attachment (A).
- Fix the supplied attachment plate to a desired place with a screw by using the hole on the vertical part of the plate. Then, attach the barometer on the plate with the screws supplied (B).
- The PTB210 can also be placed to a standard rail (DIN 35) by using the attachment plate and clip (B). Fasten the clip and barometer to the plate with the screws supplied. Finally, attach the clip to a suitable rail.

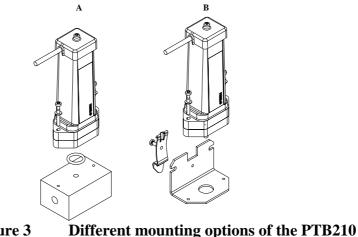


Figure 3

NOTE

Always place the barometer so that the pressure fitting is downwards.

NOTE Check that the cable is not taken upwards from the barometer. This is to prevent water flowing along the cable, and gathering close to the feed-through.

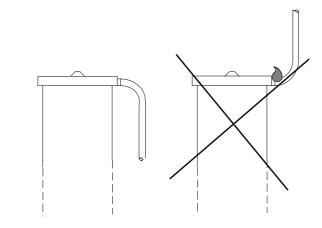


Figure 4 Recommended cable position

The IP65-classified housing enables the barometer to be mounted outdoors without any additional protection. However, please take care that rainwater cannot plug the open pressure fitting. In such conditions, it is recommended to connect a piece of a tube with inner diameter of 4 mm or more to the fitting. It is also possible to use a static pressure head, SPH10, which protects the pressure channel from rain, and minimizes the effect of wind.

Static pressure head

Please note that the pressure fitting supplied with the transmitter is not a static pressure head, and that the transmitter cannot be used successfully as such in turbulent or high-speed static wind conditions. In demanding wind conditions, it is recommended to use Vaisala's static pressure head, SPH10, to which the PTB210 digital barometers can be directly integrated. This combination provides for accurate measurement in all wind conditions.

Connections

Connect the wires of the PTB210 barometer according to Table 1. Use the pink wire for the supply voltage (8...18 VDC), and the blue wire for grounding. The output signal is read from the white wire and grounded with the brown wire.

The gray and green wires are used to connect the barometer to PC when using the calibration Wizard software, or to Vaisala PMI20 digital barometer display. As a ground, use the blue wire.

If an external power control is used, its signal wire is connected to the yellow wire.

It is recommended to isolate the free wire ends.

| Table 1 | Connections of the PTB210 barometer with analog |
|---------|---|
| | output |

| Wire color | Signal |
|------------|---------------------------------|
| Grey | RX |
| Green | TX |
| Blue | Ground |
| Pink | Supply voltage (818 VDC) |
| Brown | V _{out} ground |
| White | V _{out} |
| Yellow | External power control |
| | (TTL level: $1 = off, 0 = on$) |

CHAPTER 4 CALIBRATION AND ADJUSTMENT

The PTB210 series barometers can be fine adjusted and calibrated against pressure standards that have high accuracy and stability as well as known traceability to international standards. By comparing the output to a reference, the user can define the corrections required for readjustment.

NOTE Calibration is considered not to involve any adjustments.

It is advisable to write down the previous corrections so that they will not be lost by mistake.

The corrections are given by using the Wizard software supplied. When the new corrections have been entered to the barometer, they are activated with the Wizard. Finally, the barometer is calibrated to verify its real accuracy.

Wizard software

The user-friendly Wizard software is designed to work in WIN3.X, WIN95, and NT environment. The two-point pressure corrections for the PTB210 barometers are given through the serial line by using this program. The calibration date can also be changed using the Wizard.

Operation

- To start the Wizard program in NT: ٠
 - 1. Double-click the My Computer icon.
 - 2. Double-click the drive that contains the file.
 - 3. To start the program, double-click the WIZARD.EXE-file.

OR

- To start a program by using the Run command in NT
 - 1. Click Start, and then click Run.
 - 2. In the Open box, type the location and name of the program you want to start. Alternatively, browse the location, and choose the name of the program (WIZARD.EXE). Then, click OK.



- 1. Choose the COM port in use from the file menu.
- 2. To open the connection click the **Read PTB210**-button.

| 🔲 PTB210 - Wizard | |
|-----------------------|---------------------------|
| File About | |
| ComPort Com1 | MPC_1 Offset/gain 1 (hPa) |
| Exit Com2 | MPC_2 Offset/gain 2 (hPa) |
| Com3 | |
| Serialnumber | |
| Unit | |
| Pressure limits (hPa) | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | Read PTB210 |
| | |

3. Give reference pressure values and the corresponding corrections. Calculate the corrections according to the equations below.

NOTE Because the lower end of voltage output is not exactly 0 V, use as lower calibration point a value approximately 40 mV above the lower end limit. Thus with scale 600...1060 hPa and 0...5V output the lowest calibration point will be 604 hPa.

$$P_{measured} = P_{\min} + \frac{U_{out} * (P_{\max} - P_{\min})}{U_{out \max}}$$
(1)

$$corr_{new} = (P_{reference} - P_{measured}) + corr_{previous}$$
(2)

Example to calculate the higher end correction:

Barometer scale 600...1060 hPa with the 0...5V output.

- Output reading 4.8887 V
- $P_{\text{measured}} = 600 + [4.8887 * (1060-600)]/5 = 1049.76 \text{ hPa}$
- Reference value 1050 hPa
- Previous correction 0.22 hPa
 - New correction (1050 1049.76) + 0.22 = 0.46 hPa

NOTE The previous corrections have to be added to the new ones (see the example above).

The correction at the lower end is calculated in similar way. The new calibration date can also be given.

The values are given in hPa: the reference value as whole number, and the correction with two decimals.

| | 💻 PTB210 - Wizard | | |
|--|-----------------------|----------------|-------------------------------------|
| Comm settings 9600,E,7,1 Calibration date 1999:11:24 Serialnumber U4730004 Unit hPa Pressure limits (hPa) 600:1060 | File About | | |
| Calibration date 1999-11-24 Serialnumber U4730004 Unit hPa Pressure limits (hPa) 600 1060 Correction | Version | PTB210 Ver 1.0 | MPC_1 1058 0.46 Offset/gain 1 (hPa) |
| Serialnumber U14730004 Unit hPa Pressure limits (hPa) 600 1060 Correction | Comm settings | 9600,E,7,1 | MPC_2 604 0.50 Offset/gain 2 (hPa) |
| Unit hPa Reference Correction | Calibration date | 1999-11-24 | |
| Pressure limits (hPa) | Serialnumber | U4730004 | |
| | Unit | hPa | Poforonco |
| | Pressure limits (hPa) | 600 1060 | Reference |
| Read PTB210 Write PTB210 | Voltage mode | 05.0 | |

4. To save the new corrections, click the Write PTB210-button.

| 💻 PTB210 - Wizard | | | | | | _ 🗆 × |
|-----------------------|----------------|------------|---------|------|---------------|-------|
| File About | | | | | | |
| Version | PTB210 Ver 1.0 | MPC_1 | 1058 | 0.46 | Offset/gain 1 | (hPa) |
| Comm settings | 9600,E,7,1 | MPC_2 | 604 | 0.50 | Offset/gain 2 | (hPa) |
| Calibration date | 1999-11-24 | | | | - | |
| Serialnumber | U4730004 | | | | | |
| Unit | hPa | | | | | |
| Pressure limits (hPa) | 600 1060 | | | | | |
| Voltage mode | 05.0 | Read PTB21 | D Write | PTB2 | 10 | |

5. The program then asks a password. As default, no password exists. Just click **OK**. The password can be used to prevent saving of any new corrections without entering it. To give a password, click the **Change**-button.

| ; |
|---|
| E |

6. Enter a new password and confirm by re-entering it.

| | × | | × |
|-----------------------------|---|--------------------|--------------|
| New Password ? OK Cancel | | ReEnter Password ? | OK Cancel |
| | | | |

NOTE

Remember to set the MPC corrections on after given them.

CHAPTER 5 TECHNICAL DATA

Technical specifications

Operating range

| Pressure range (order specified) | 5001300 hPa |
|----------------------------------|----------------|
| | 8001060 hPa |
| | 6001060 hPa |
| | 9001100 hPa |
| Operating temperature range | -40+60°C |
| Humidity range | non condensing |

Accuracy

| Non linearity* | ± 0.20 hPa |
|--|--------------------------|
| Hysteresis* | ± 0.05 hPa |
| Repeatability* | ± 0.05 hPa |
| Calibration uncertainty** | ± 0.15 hPa |
| Total accuracy (20°C)*** | ± 0.30 hPa |
| Temperature dependence (-40+60°C)**** Total accuracy*** (40+60°C) | ± 0.50 hPa ± 0.60 hPa |
| (-40+60°C) | \pm 0.00 hPa |
| Long term stability | \pm 0.10 hPa/year |

* Defined as the ± 2 standard deviation limits of end-point nonlinearity, hysteresis error or repeatability error.

** Defined as ± 2 standard deviation limits of inaccuracy of the working standard including traceability to NIST.

*** Defined as the root sum of the squares (RSS) of end-point nonlinearity, hysteresis error, repeatability error and calibration uncertainty at room temperature.

**** Defined as ±2 standard deviation limits of temperature dependence over the operating temperature range.

General

| Outputs (order specified) | 05 VDC 02.5 VDC |
|---------------------------|-------------------------------------|
| Supply voltage | 8 18 VDC reverse polarity protected |
| Current consumption | |
| normal mode | < 8 mA |
| shutdown mode | 0.2 mA |
| Shutdown | ON/OFF |
| Response time | 500 ms |
| Resolution | 300 μV |
| Measurement rate | 3 measurement/s |
| Max. pressure | 5 000 hPa abs. |
| Pressure connector | M5 (10-32) internal thread |
| Pressure fitting | barbed fitting for 1/8" I.D. tubing |
| Housing | |
| electronics | IP65 |
| sensor | IP53 |
| Housing material | PC plastic |
| Cable length | 1, 2, 3, 5, or 10 m |
| Weight | |
| Instrument | 110 g |
| Cable | 28 g/m |

Electromagnetic compatibility

Fully electromagnetically compatible according to standards:

- EN 50081-1 - EN 50082-1 Tested according to EN 55022 class B Tested according to EN 61000-4-2, EN 61000-4-3 + ENV 50204, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6

CE

Dimensions in mm (inch)

